


Turn latches to change for left or right hung door


Note! Bolt shall always be erected with the cut end in the doors opening direction.

Shoot adjustable 25mm and reversible for right and left function.

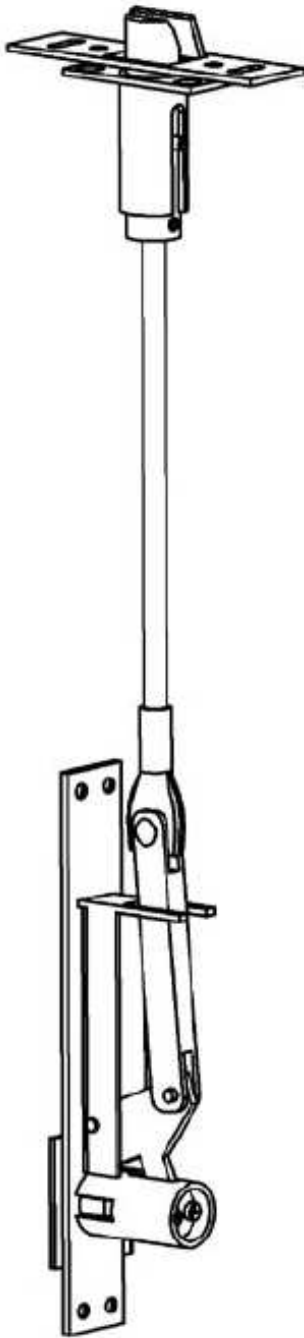

Loosen stop screws before you adjust the length or direction of the bolt.

After the adjustment tightening the stop screws.

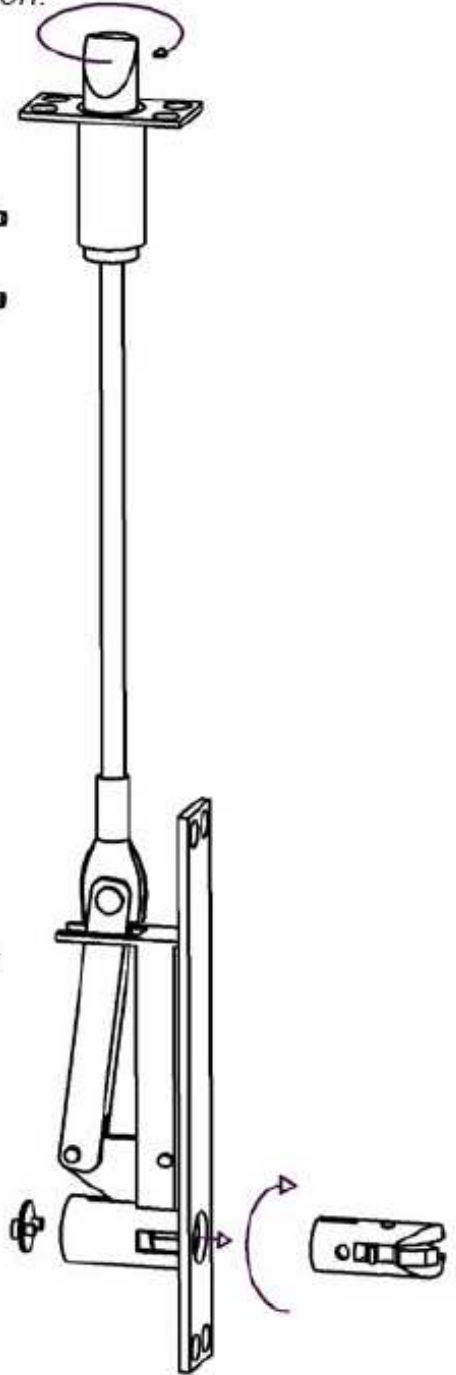

Latchbolt reversible for left and right function.

Screw out the two M3 screws on the back of the latchbolt .

Remove the latchbolt

Turn the latchbolt 180 degree and insert it from the same side.